

Activating Features on Tieline G3 Codecs

To activate Failover on your Tieline Codec


1. Navigate to: **Menu** → **Configuration** → **Advanced Menu** → **Failover** →
Scroll to select "Enable"
2. At the "**Enter Code**" prompt, enter your 12 digit "Feature Code" including the two preceding asterisks "******" provided below
3. Press soft button #4 "**OK**" to accept
4. Press the "Clear" button repeatedly to return to the Main Menu
5. Reboot the codec: **Menu** → **Reset Functions** → **Reboot System**

To activate Matrix on your Tieline Codec

6. Navigate to: **Menu** → **Configuration** → **Advanced Menu** → **Matrix** → *Scroll to select "Enable"*
7. At the "**Enter Code**" prompt, enter your 12 digit "Feature Code" including the two preceding asterisks "******" provided below
8. Press soft button #4 "**OK**" to accept
9. Press the "Clear" button repeatedly to return to the Main Menu
10. Reboot the codec: **Menu** → **Reset Functions** → **Reboot System**

To activate IP Streaming on your Tieline Codec

1. Navigate to: **Menu** → **Configuration** → **Advanced Menu** → **IP Streaming** →
Scroll to select "Enable"
2. At the "**Enter Code**" prompt, enter your 12 digit "Feature Code" including the two preceding asterisks "******" provided below

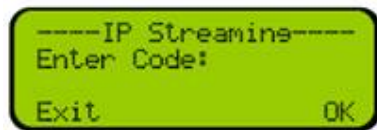

3. Press soft button #4 "**OK**" to accept
4. Press the "Clear" button repeatedly to return to the Main Menu
5. Reboot the codec: **Menu** → **Reset Functions** → **Reboot System**

To check the option is activated

1. Navigate to: **Menu** → **Unit Details** → **Features Enabled**
2. A list of activated Features is provided here

Note: If you have activated IP Streaming, "[IP1 Enter#]" should now also be available on the LCD display Main menu (if an active LAN connection is connected to the Codecs LAN port)