

1 Installing the Codec at the Studio

Studio IP Streaming Setup for Tieline Audio Codecs

The following instructions are intended to help you configure your internet connection and Tieline codecs at the studio to enable incoming calls over the internet from a remote Tieline codec. It is assumed that you have a basic understanding of your IP network and how to configure IP devices. If you have limited IT network knowledge, we recommend you engage the services of an IT professional to install the public IP address and perform the Network Address Translation (NAT) and port forwarding between the public internet and your private Local Area Network (LAN) at the studio.

Prerequisites

The following procedures are valid for:

- All firmware versions in the Genie and Merlin codec families.
- All Bridge-IT and Bridge-IT XTRA codecs with firmware release v.2.x or higher.
- All Commander G3 and i-Mix G3 codecs.

Getting Started at the Studio

To perform a typical codec installation at the studio you will need to:


1. Contact your Internet Service Provider and organize a dedicated high speed broadband connection at the studio for your codec with a public static IP address. Do not share this connection with other devices.
2. Install your codec at the studio and attach an active RJ-45 LAN cable to the "LAN" or "Ethernet" port on the rear of the codec. Please note:
 - The green LED underneath the "LAN" or "Ethernet" port will illuminate and the orange LED will flash steadily if you are connected to an active LAN connection.
 - The Genie and Merlin families of IP codecs support two simultaneous Ethernet connections.
3. If you are connecting a single codec to a router without a firewall you can enter the public IP address, Subnet Mask and Gateway directly into the codec and your work is done. Note: your Telco should be able to provide this information.
4. Alternatively, if you are connected to a router with a firewall, configure Network Address Translation (NAT) in your router. NAT is performed between the public internet and your private Local Area Network (LAN) by your router. Your remote codec sends IP data packets to the studio router's public static IP address and the router performs NAT, which forwards these data packets to the private IP address allocated by the router to your codec. As part of this process we recommended you:
 - Connect to your router using a web-browser.
 - Configure it to allocate a static private IP address for each codec.



Important Note: The IP address may change if the codec is allocated a DHCP IP address by the router and it loses power or is temporarily disconnected from the LAN. This will cause problems for remote codecs attempting to dial and connect.

5. Ensure your router's firewall is configured with the relevant TCP and UDP IP ports open to allow data traffic between your codec and the remote codec. The process is fairly simple if you use the following procedure:
 - a. Connect to your router using a web-browser.
 - b. Navigate to <https://portforward.com/router.htm>
 - c. Select your router manufacturer from the list.
 - d. Next, select your router model from the list.

- e. Follow the instructions to complete port forwarding. Note: It is necessary to select the device you are configuring in the drop-down "Application" menu (usually step 4). Select "Tieline Bridge-IT", "Tieline-G3" or "Tieline -G5" to suit the codec you are configuring.
6. Visit <https://www.ipfingerprints.com/portscan.php> and use the online port scanner to verify your router's TCP and UDP ports are open.
 7. Configure the static IP address in your codec using the instructions in the next section. To allow multiple codecs to share a single public static IP address behind a firewall and route the calls correctly, your codecs and the firewall need to be configured similarly to the example diagram which follows. Ensure the port, IP address, Subnet Mask and Gateway settings in your codecs match those configured in your router.

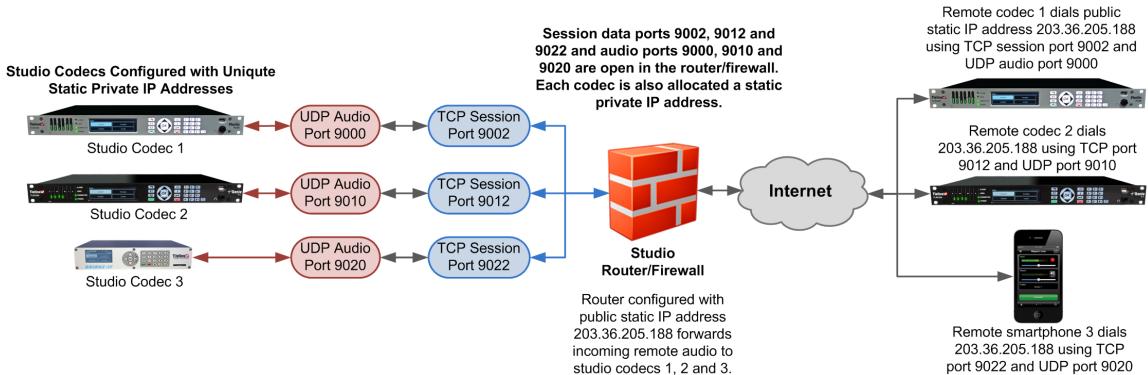

Port Forwarding to 3 Studio Codecs Sharing a Public Static IP Address



Important Note:


- The most common studio configuration issue is a firewall which blocks the incoming and/or outgoing TCP and UDP ports, or not configuring NAT and port forwarding correctly. The following table lists the firewall ports you need to open for each model of Tieline codec if they are dialing your router at the studio. If the remote codec is also connected to a LAN with a firewall you may also need to open the ports at the remote end of the link to connect successfully.
- Some firewalls require symmetric port configuration. The codec supports configuration of the "send" audio port (codec port at the remote end of the link to which you are sending audio) and "return" audio port (port used by the local codec to receive audio from the remote codec).

Firewall Ports							
Commander G3 / i-Mix G3		Bridge-IT / Bridge-IT XTRA		Merlin and Genie Codec Families		ViA Codec	
TCP	UDP	TCP	UDP	TCP	UDP	TCP	UDP
IP1 Session Port: 9002	IP1 Audio Port: 9000	Session Port (Sess): 9002	Audio (Proto): 9000	Session Port: 9002	Audio Port Stream 1: 9000	Session Port: 9002	Audio Port Stream 1: 9000
IP2 Session Port: 9012	IP2 Audio Port: 9010	Web-GUI: 80	SIP Session: 5060	Alternative Session: 9012	Audio Port Stream 2: 9010	Alternative Session: 9012	Audio Port Stream 2: 9010
Toolbox Software: 5550	Toolbox Software: 5550	Alternative Session: 9012	SIP Audio: 5004	Web-GUI: 80	Audio Port Stream 3: 9020	Web-GUI: 80	SIP Session: 5060
	SIP Session: 5060	Alternative Web-GUI: 8080		Alternative Web-GUI: 8080	Audio Port Stream 4: 9030	Alternative Web-GUI: 8080	SIP Audio: 5004-5054
	SIP Audio: 5004				Audio Port Stream 5: 9040		
					Audio Port Stream 6: 9050		
					SIP Session: 5060		
					SIP Audio: 5004-5054		

Configuring a Static Public or Private IP Address in Genie, Merlin and Bridge-IT (v.2.x firmware) Codecs

To enter a static IP Address into the codec for NAT:

1. Press the **HOME** button to return to the **Home** screen.
2. Use the navigation buttons to select **Settings** and press **OK**.
3. Use the down navigation button to select **Network** and press **OK**.
4. Select **Eth1** and navigate to IPv4 mode and press **OK**.

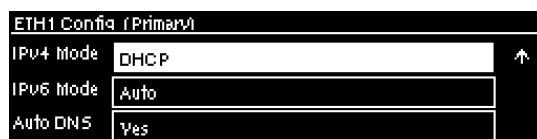

5. DHCP is enabled by default. Select **Static** and press **OK**.



6. The Static IP address menu is revealed after DHCP is disabled. Use the navigation buttons to select **IPv4 Static IP** and press **OK**.

ETH1 Config (Primary)	
IPv4 Mode	Static
IPv4 Static	127.0.0.1
IPv4 Subnet	255.255.255.0

7. Use the numeric **KEYPAD** to enter the IP address and press **OK** to store the setting. Note: use the * or # buttons to enter the periods in the IP address and use the **RETURN**  button to delete any numbers already entered.

ETH1: Enter IPv4 Static Address	
172.16.1.2	
OK to continue	

8. Enter changes to the **IPv4 Subnet** (Subnet Mask) or **IPv4 Gateway** (Default Gateway) in the same way if they are required (check with your network administrator for these settings).
 9. After all changes have been made use the navigation buttons to scroll to the top of the menu and select **Apply Setting**, then press the OK button to save all changes.
 10. From the **Home** screen select **Settings > Unit > Eth** in the codec menus to ensure the new static IP address has been entered correctly.

Configuring a Static IP Address in Commander G3 and i-Mix G3 Codecs

To set up a static IP address in Commander G3 and i-Mix G3 codecs select **Menu > Configuration > Advanced > LAN settings > IP Setup > Setup > Static > IP Address > [enter IP address] > press OK > Subnet Mask [enter Subnet Mask] > press OK > Gateway [enter Gateway] > press OK > reboot the codec.**

Record IP Address Details

IPv4 Static IP Address	
IP Address	. . .
Subnet Mask	. . .
Default Gateway	. . .
IPv6 Mode: Manual	(Bridge-IT, Genie and Merlin codecs only)
IP Address	: : : : : : :
IPv6 Prefix Size	
IPv6 Gateway	: : : : : : :

Getting Connected

Once the studio codec is configured you are now ready to receive an incoming call from the remote codec over the internet. Always dial from the field codec to the studio codec over the internet unless the remote codec is assigned a public static IP address and you know this address.

If you dial the studio using a cell-phone data network at the remote site you will not normally experience any firewall or port blocking issues at the remote end of the link using default Tieline ports.

Troubleshooting: How to Determine Where Firewall Port Blocking is Occurring

If you find you are unable to either send or receive audio between the studio and remote codecs you can use Tieline's Link Quality reading to diagnose where ports are being blocked. LQ can be displayed on the front **LCD SCREEN** of Tieline's Bridge-IT, Merlin and Genie codecs by selecting **Cxns**, then select the connection you want to view and press the **OK** button. LQ readings are also displayed on the home screen of all Commander and i-Mix G3 codecs.

Link Quality (LQ) Readings

Send and Return LQ numbers help you to determine if a problem is occurring at either end of a connection. For example, on an IP connection the Return LQ reading represents the audio being downloaded from the network locally (i.e. audio data is being sent by the remote codec). Conversely, the Send LQ reading represents the audio data being sent by the local codec (i.e. being downloaded by the remote codec). To ensure a stable connection, try to maintain a reliable reading of 80 or higher for both the **Send** and **Return** LQ reading.




Important Note:

- The **Return** link quality reading is the same as the Local (**L**) setting displayed on a G3 codec.
- The **Send** link quality reading is the same as the Remote (**R**) setting displayed on a G3 codec.

Diagnosing Port Blocking via the Studio Codec LQ

If the studio codec **Return** LQ reading is **01** then incoming audio from the remote codec is being blocked by a firewall at either point A or B in the following diagram. If the studio codec **Send** LQ reading is **01** then outgoing audio from the studio is being blocked by a firewall at either point C or D in the following diagram.

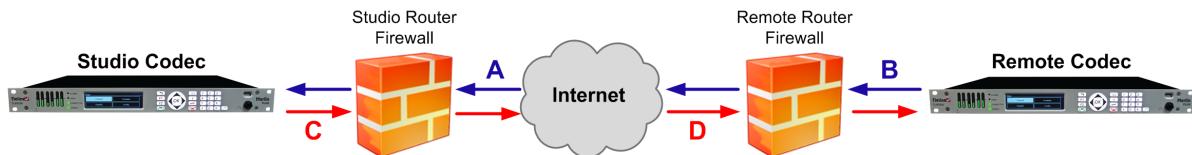

Diagnosing Port Blocking via the Remote Codec LQ

If you attach your Tieline codec at the remote site to a LAN with access to the internet you can often dial and connect to the studio without any problem. It is less likely that a firewall will block outgoing TCP and UDP ports. However, if there is a firewall at the remote site it may block incoming data packets from the studio.

The principle is the same at the remote codec for diagnosing blocked ports. If the remote codec **Return** LQ reading is 01 then incoming audio from the studio codec is being blocked by a firewall at either point C or D in the preceding diagram. If the remote codec **Send** LQ reading is 01 then the outgoing audio from the remote codec is being blocked by a firewall at either point A or B in the preceding diagram.

Troubleshooting TCP Port Blocking

Error messages on the codec screen can help to diagnose TCP port blocking.

- "Connection Refused"** usually means that the firewall is configured correctly but the codec is not using the expected port. For example, the firewall is set up to forward via port 9002 but codec is 'listening' to port 10,000. "Connection Refused" is not normally shown if the firewall is not configured correctly because a firewall will by design silently drop any

forwarding requests to ports that it doesn't have open (see next point). Note: "Connection Refused" will also be displayed if the Commander G3 or i-Mix G3 codec you are calling is already connected.

2. **"Connection Timeout"** can mean one of two things:
 - The firewall is not configured correctly and the attempted codec connection is being silently dropped, e.g. a remote codec is dialing to port 9002 but the studio firewall port forwarding is not configured.
 - The UDP port is not port forwarded correctly. Tieline codecs send test data during connection establishment to make sure that the audio path is configured correctly; if this process fails then it will also result in a "Connection Timeout".

How do I determine which end is blocking data flow?

Tieline test codec firewalls have the default Tieline TCP and UDP ports open. You can dial into these test codecs (or other codecs you know are configured correctly) from your recently configured studio and remote codecs and use the LQ readings to diagnose whether your studio or remote codec firewall is blocking your data packets. If one codec connects ok and the other one doesn't, then you will know which end is likely to be causing the problem. As an example:

1. Dial from site 1 to a Tieline test codec.
2. Dial from site 2 to Tieline test codec.

If both of these connect successfully then the "outbound" TCP path for session data is OK, and the inbound UDP audio path is OK.

3. Dial to site 1 from a codec you know is configured correctly.
4. Dial to site 2 from a codec you know is configured correctly.

If either of these calls fail then TCP and/or UDP inbound data is being blocked on the failed connection (see "Troubleshooting TCP Port Blocking" above).

Testing your Codec

Visit the Tieline website at www.tieline.com and select "Support" and then "Test Lines" for a list of test IP codec addresses you can use to verify your codec is configured correctly.