1 Enabling the Cloud Codec Controller

To allow Bridge-IT and Bridge-IT XTRA to be configured and managed by Tieline's Cloud Codec Controller over the public internet it needs to be enabled for CCC management:

- 1. Press the **SETTINGS** \bigcirc button.
- 2. Use the navigation buttons to select **Web-GUI** and press the ox button.



3. Navigate down to **CC Controller** and press the web button to toggle between **Enabled** and **Disabled**.





Important Notes:

- Ensure **CSRF** is disabled in the codec or it will not be able to connect to the CCC. This setting is **[OFF]** by default and is also available in the codec menu via **Settings > WebGUI**, and in the **Options** panel in Toolbox.
- Locally Defined Codecs over a private network do not need to be enabled for CCC operation.
 Only codecs that require internet access need to be enabled.
- The CCC needs to continually send and receive data between codecs to update information displayed. If the CCC is left open on a computer and is not used for more than 4 hours, the Codec Viewer is placed in 'sleep' mode to save on data use.